

Secure your ride with **SECURELIGHT**

Installation Guide Version 1.0

1 Mounting SecureLight




SecureLight is designed to be installed on the inside of your windshield. Choose a location on the windshield which is closest to your fuse box for easy installation.

Using the double sided tape mount onto the windshield. Be sure to clean the windshield with rubbing alcohol prior to mounting for maximum strength.

3 Installation without alarm system.


SecureLight will activate when engine is turned off.

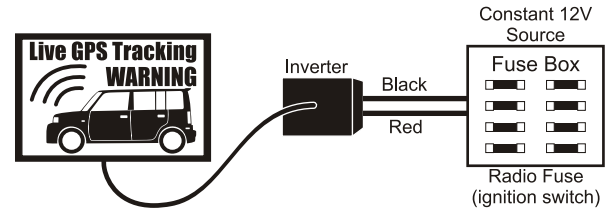

Use a test pen to test and determine where to connect the wires. Connect the red wire (positive) to the fuse which always lights up when tested with the test pen regardless if the ignition is turned on or off. Connect the black wire (ground) to the fuse which lights up only when ignition is turned on (preferably to the radio fuse)

2 Installation with alarm system.

SecureLight will activate when you arm your alarm.

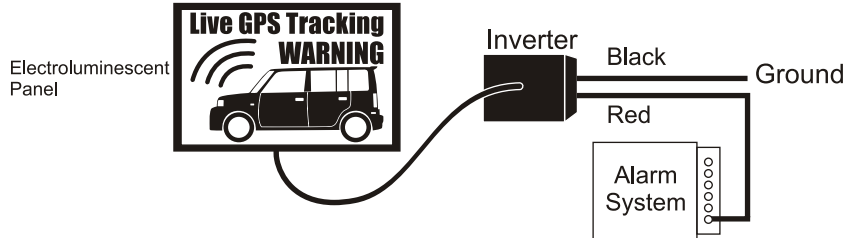

4 FAQ

- 1) Why does my SecureLight light up when my car is turned on?**
You have installed the wires in reverse, follow the manual and install the positive wire (red) to a fuse which is constantly on and install the black wire (ground) to the fuse which is on only when car is started.
- 2) What controls the flashing of the SecureLight badge?**
The flashing sequence is controlled entirely by the inverter. No additional switch or relay is required.