

This installation guide is intended for cars which comes with or without an alarm system installed. However if you have an alarm system installed in your car, you can also connect the SecureLight to you alarm system. Please refer to the documentation that came with the alarm.

1



Locate the fuse box (usually located near the ignition).

2



Remove cover to reveal fuse box.

3



Pay attention to the fuse symbols. Use non-critical fuse (e.g radio fuse).


4



Use a test pen to test and determine where to connect the necessary wires. **Connect the red wire (positive) to the fuse which always lights up regardless if the ignition is turned on or off.**

**Connect the black wire (ground) to the fuse which lights up only when ignition is turned on (preferably to the radio fuse).**

5

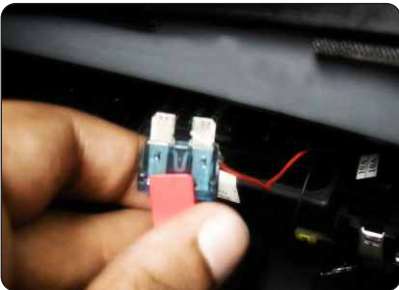

Remove the desired fuse and connect the wire.

6



Both wires connected successfully. Once you have connected the wires, the SecureLight badge should flash when you turn off your cars ignition, and it should stop flashing when the ignition is turned on.

## Required Tools

1 Test Pen



2 Plyer or Tweezer (optional)

